


battat®


Childhood Is Magical!®

POP-A-DOODLE-DOO™



9
m+

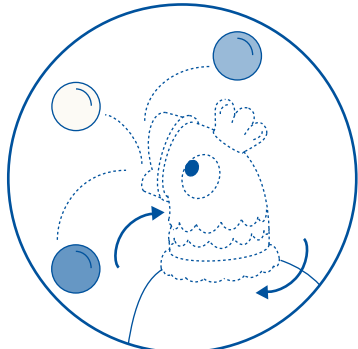

Turn the chicken's head to pop balls in any direction.

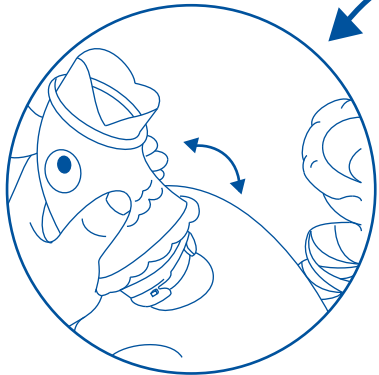

If something gets stuck inside the toy, simply detach the spout for removal and reattach as shown.

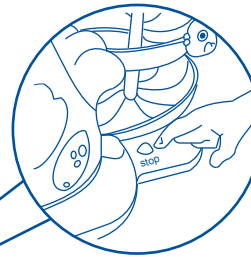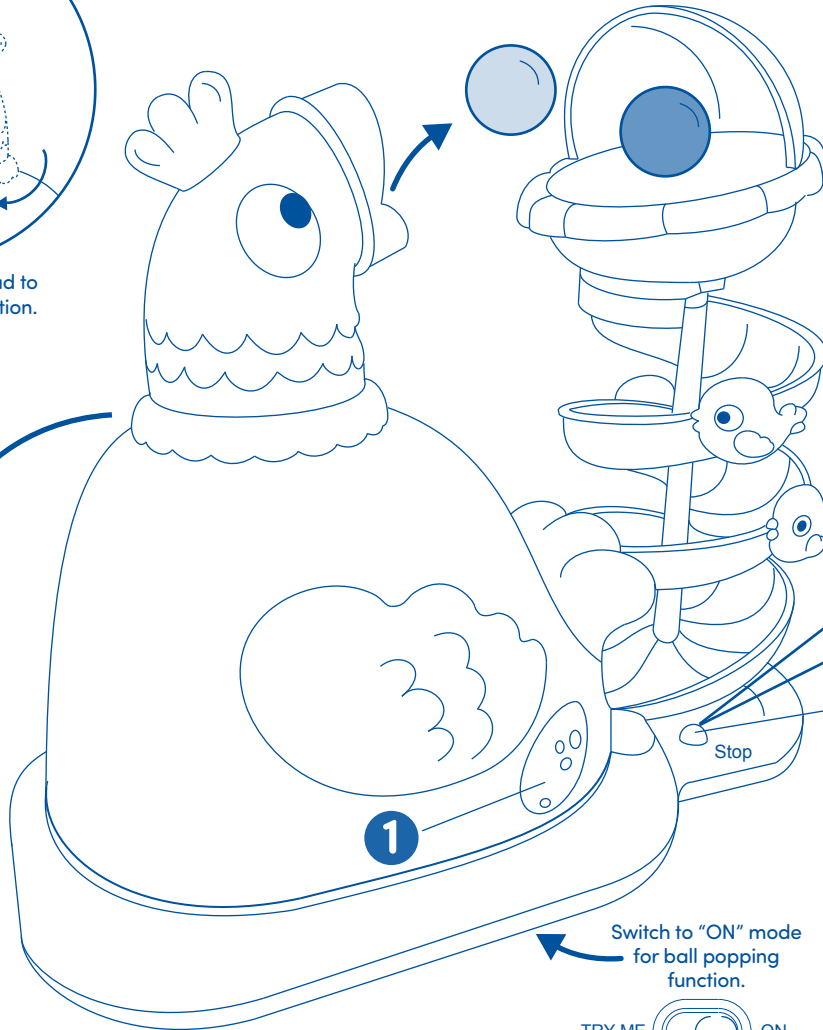


2

Stop


Switch to "ON" mode for ball popping function.




PARTS LIST

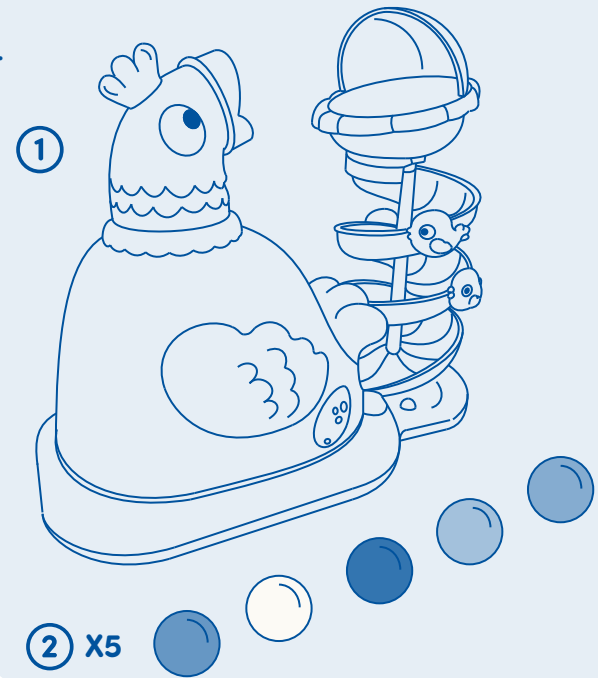

FUNCTIONS:

1. Press  to see the lights flash, balls pop, and hear 3 barnyard songs.
2. **STOP:** Double press the STOP button to pause all functions. To get stuck balls moving again, press once to reverse wheels.
3. **TRY ME / OFF / ON** (Demo Songs / OFF / Songs + Popping Balls)

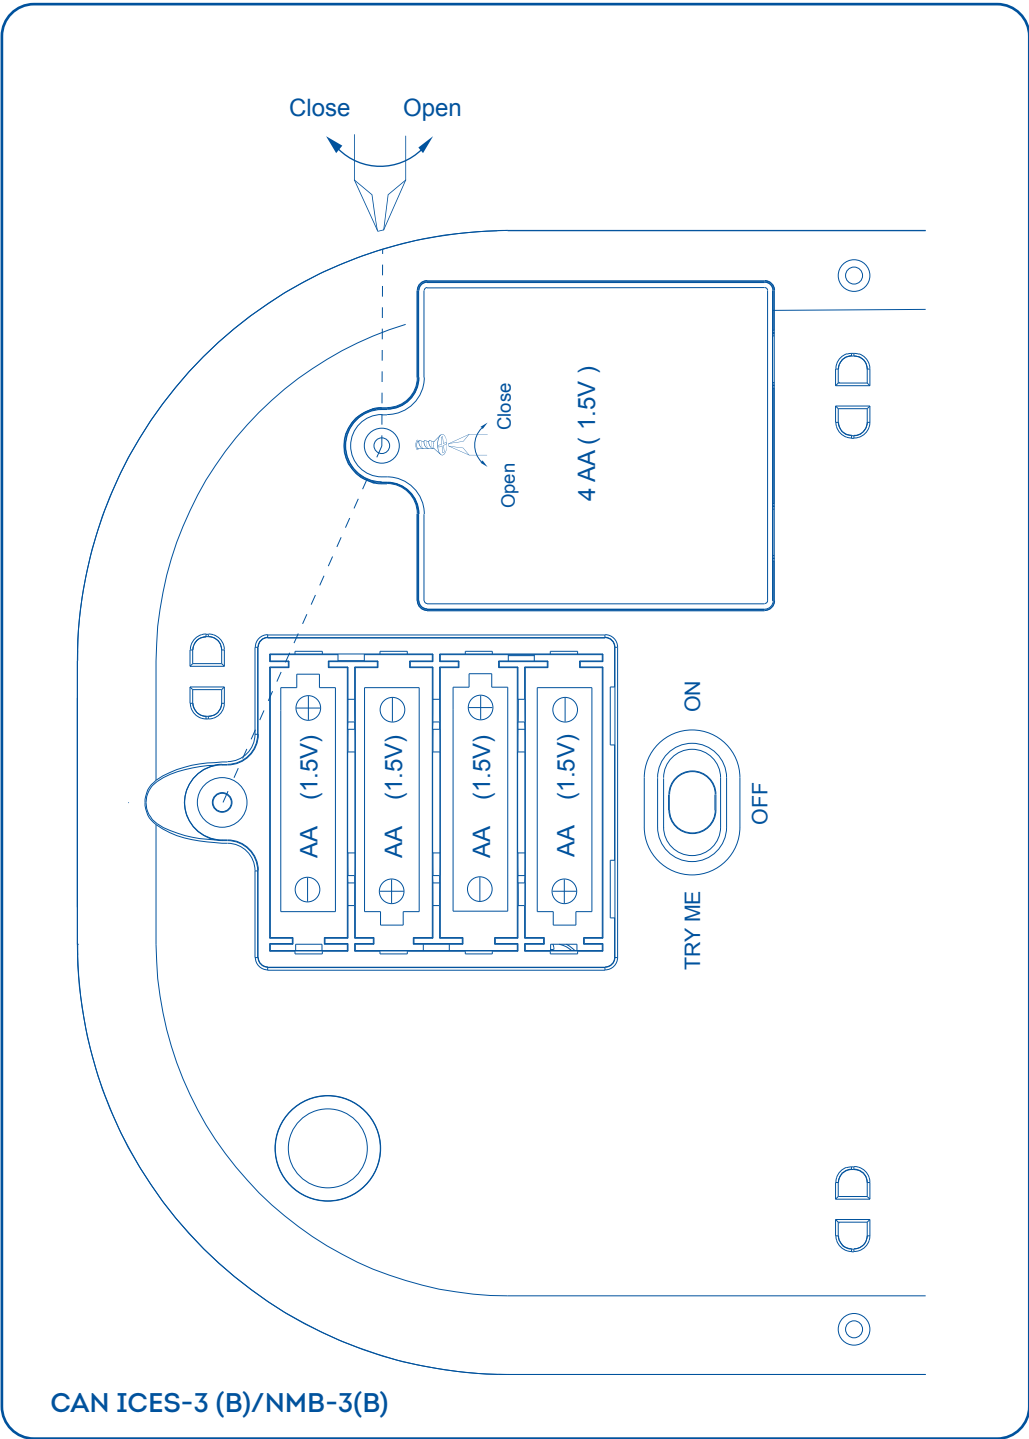

REPLACING BATTERIES


4 x AA (1.5V) batteries included. Batteries should only be replaced by an adult. Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Do not re-charge non-rechargeable batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the product before being charged. Ensure batteries are inserted with the correct polarity. Exhausted batteries should always be removed. The terminals should not be short-circuited.

ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

Waste electrical products and old batteries should not be disposed with household waste. Help protect the environment by reusing & recycling. Check with your local authority or retailer for recycling advice.

OTHER SIDE OF CHICKEN

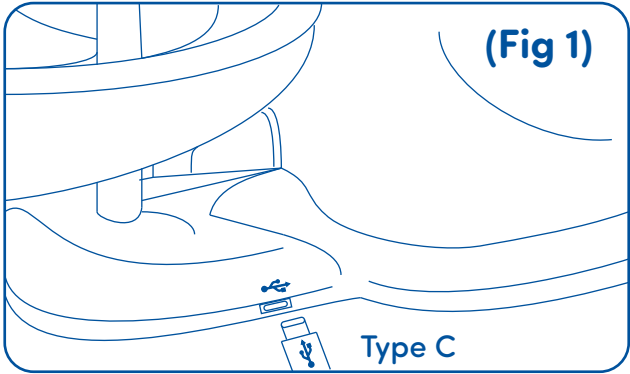

Rated voltage: 5V
 Maximum power input: 5W
 Maximum current: 1A

Don't want to use batteries? Power the toy with a USB cord (NOTE: The cord is NOT included, and it will NOT charge the batteries).

WARNING: Make sure to connect to a wall outlet with a power bank. NEVER connect to a laptop or a desktop computer, as this will permanently damage the toy.

© 2024 MAISON BATTAT INC.
 Manufactured for Maison Battat Inc.
 8440 Darnley Road, Montreal, P.Q. H4T 1M4
 Designed by Maison Battat Inc.
 Battat® is a registered trademark of
 Maison Battat Inc. Made in China.
 All Battat® products meet all US safety
 standards. Colors may vary.
 Please retain this information for future reference.
 Please remove all packaging materials before
 giving to children.

