battat Childhood Is Magical!® **ROCK N' PLAY GUITAR**^M 0 W 4 3 **(5** Fig.1 **Acoustic Chord** 000

Songbook

Electric Chord

FUNCTIONS:

1. ON / OFF SWITCH & VOLUME CONTROL:

Turn the dial to turn on the guitar and adjust the volume level.

2. Pre-Recorded Songs & 2 Play Modes:


Musical Notes: Press the button and listen to 7 fun songs. Strum the guitar strings to complete each song. Press it again to switch songs.

ACOUSTIC Acoustic Guitar Mode: Press the button to activate an acoustic sound effect, then press the chord buttons or strum the strings to hear acoustic guitar sounds.

Electric Guitar Mode: Press the button to activate an electric sound effect, then press the chord buttons or strum the strings to hear electric quitar sounds.

- 3. Chords: Press the buttons to play chords.
- 4. Strings: Strum the strings to play chords (see Fig. 1).
- 5. Whammy Bar: Press down to hear a cool sound effect.

AUTO OFF: When idle for 2 minutes, the guitar will automatically turn off.

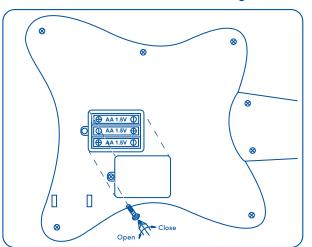

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorien or relocate the receiving antenna. • Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver connected. • Consult the dealer or an experienced radio/TV technician for help

Waste electrical products and old batteries should not be disposed with household waste. Help protect the environment by reusing & recycling. Check with your local authority or retailer for recycling advice.

REPLACING BATTERIES

Requires 3 x AA (1.5V). Batteries included. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

CAN ICES-3 (B)/NMB-3(B)

© 2024 MAISON BATTAT INC.
Manufactured for Maison Battat Inc.
8440 Darnley Road, Montreal, P.Q. H4T IMA
Designed by Maison Battat Inc.
Battat® is a registered trademark of
Maison Battat Inc. Made in China.
All Battat® products meet all US, Canadian
and EN safety standards. Colours may vary.

Please retain this information for future reference.
Please remove all packaging materials before
giving to children.



