

ZOOM ZOOM DRIVING WHEEL™





LIGHTS,

songs &

sounds

Features:

1. OFF/ON/START KEY

START: Turn the key all the way to the right to start the engine.

OFF: Turn the key all the way to the left to turn off the engine.

2. HORN BUTTON

Press horn button to honk.

3. MUSIC MODE

Play two different songs by pressing the music button. Press again to play next song. Press once more to stop the music.

4. RACING MODE

A countdown plays, followed by music with matching lights. Press again to play a new song. Press once more to exit racing mode.

5. STOP BUTTON Press STOP button for braking sound, the red traffic signal will light up.

6. GO BUTTON

Press GO button for driving sound, the green traffic signal will light up.


7. TURN SIGNALS Turn the wheel to the left or right to activate the turn signal.


8. VOLUME CONTROL

Adjust volume level.

9. SCREEN The car will turn when you turn the wheel.



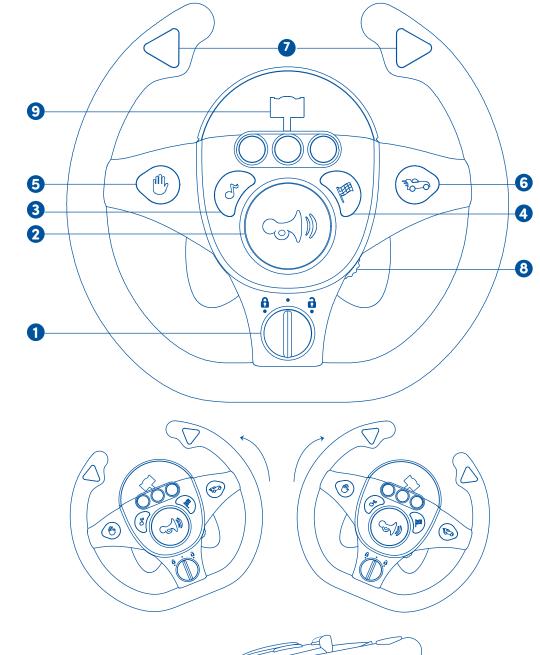

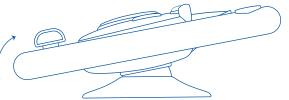



ZOOM ZOOM DRIVING WHEEL[™]





REPLACING BATTERIES

3 x AAA (1.5V) batteries included Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are not to be short-circuited.

ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

WARNING: This toy produces flashes that may trigger epilepsy in sensitised individuals.

CAN ICES-3 (B)/NMB-3(B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio communications. However, there is no dese cause harmful interference to radio oc the vision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Waste electrical products and old batteries should not be disposed of with household waste. Help protect the environment by reusing and recycling. Check with your local authority or retailer for recycling advice.

Please retain this information for future reference.

Please remove all packaging materials before giving to children.

REPLACING BATTERIES

