

battat® Childhood Is Magical!® Hop In Ball Pit[™]



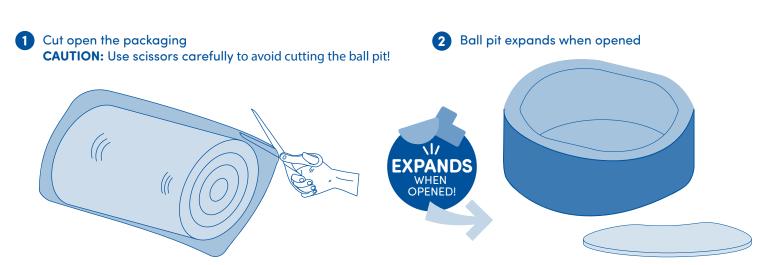




3 Flip the ball pit upside down and unzip the bottom to insert the foam base.

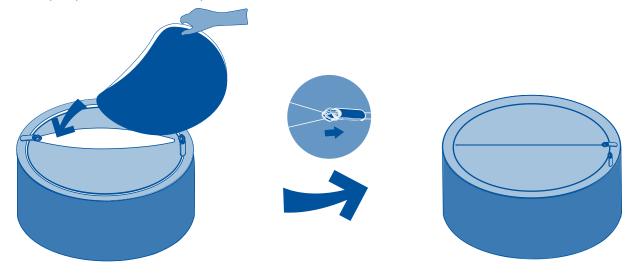


4 For the best results, leave the ball pit to expand for at least 48 hours.

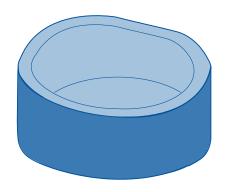





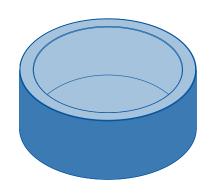


TIP: If you notice a slight deformation, simply use a blow dryer (at a normal temperature) to correct the shape. Blow on the ball pit at a 2-inch (5cm) distance.

• You can also fill the ball pit with pillows and blankets to correct the shape.





6 Close the zipper and make sure the pull tab is fully hidden beneath the lining to prevent children from unzipping the ball pit.

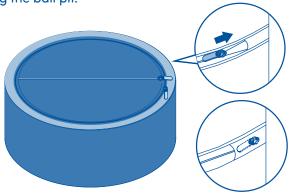




WASHING INSTRUCTIONS:

Remove the cover Do NOT wash the foam piece Machine-wash at max. 30°C/86°F Do NOT bleach Tumble dry on low Do NOT iron Do NOT dry clean

OPTIONS FOR WRINKLE REMOVAL:

- Wipe the cover with a damp washcloth and dry it with a blow dryer
- Iron the cover with a steam iron without direct contact (do NOT use a dry iron)
- For the best results, wash and dry the cover

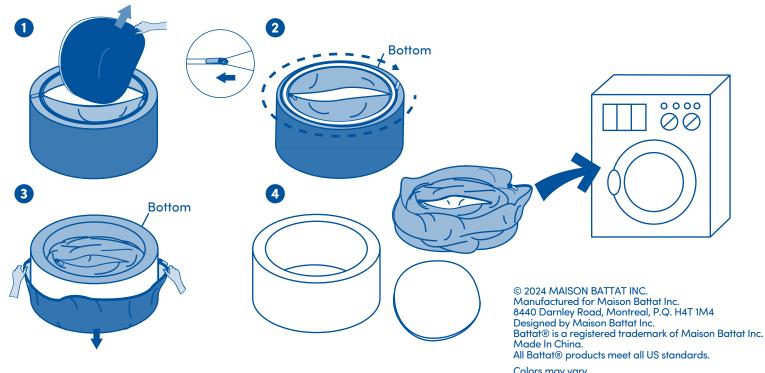

WARNING! Keep away from fire and heat sources to avoid permanent damage to the product.

Adult Assembly required.


Colors may vary.
Please retain this information for future reference.
Please remove all packaging materials
before giving to children.

BT1841


HOW TO REPLACE THE COVER AFTER WASHING IT:




Pull up a part of the cover and wrap it around the edge of the ball pit.

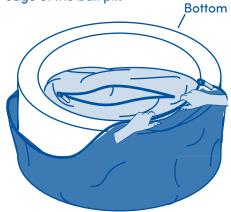


Pull up the rest of the cover and wrap it around the edge of the ball pit.

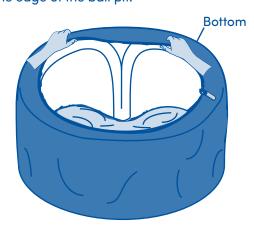


6 Connect the zippers and close the first zipper as indicated.

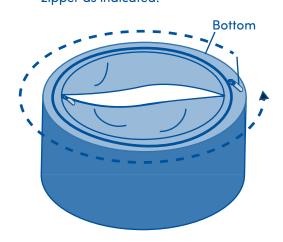


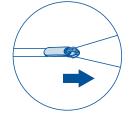


1 Place the cover under the ball pit bottom-side-up.

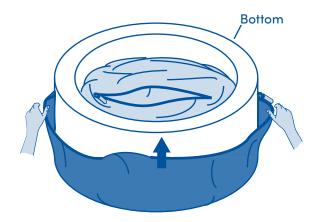

3 Fold the ball pit inwards.

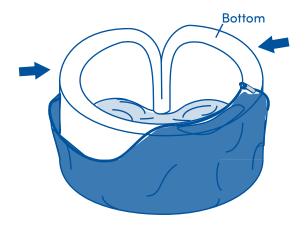

Unfold the ball pit to regain the original shape and bring up the bottom of the cover.

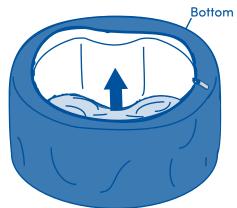

Insert the foam base and close the second zipper.

