


3 For the best results, leave the foam shapes to expand for at least 48 hours.

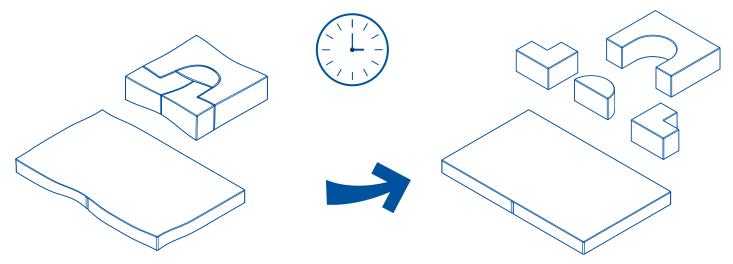

BT1849


Reshaping:

4

If the foam pieces do not achieve the desired shape after more than 48 hours, use a blow dryer (at a normal temperature) to correct the shapes.

- Keep the blow dryer 4 inches (10cm) from the foam pieces
- Reshape the warmed foam pieces by hand

CAUTION: do not keep the blow dryer focused on one spot. Be sure to move side to side.

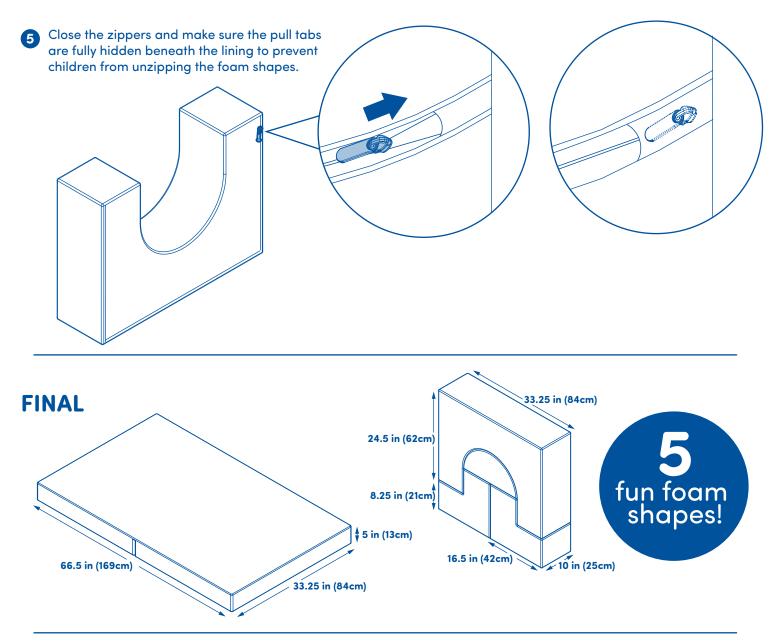


WASHING INSTRUCTIONS:

Remove the covers Do NOT wash the foam shapes Machine-wash at max. 30°C/86°F Do NOT bleach Tumble dry on low Do NOT iron Do NOT dry clean


OPTIONS FOR WRINKLE REMOVAL:


- Wipe the cover with a damp washcloth and dry it with a blow dryer
- Iron the cover with a steam iron without direct contact (do NOT use a dry iron)
- For the best results, wash and dry the cover

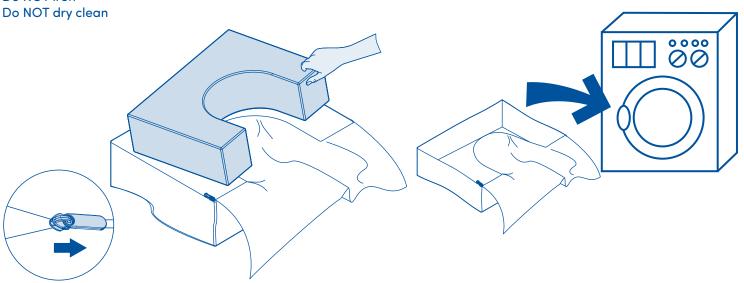


How to replace the covers after washing them:

When putting on a cover, pull on it with one hand and push the foam piece with the other. This helps when replacing a cover.

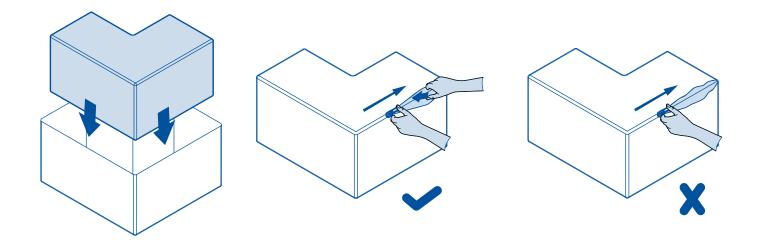

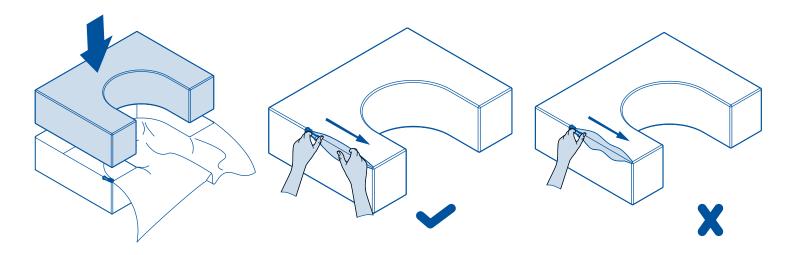

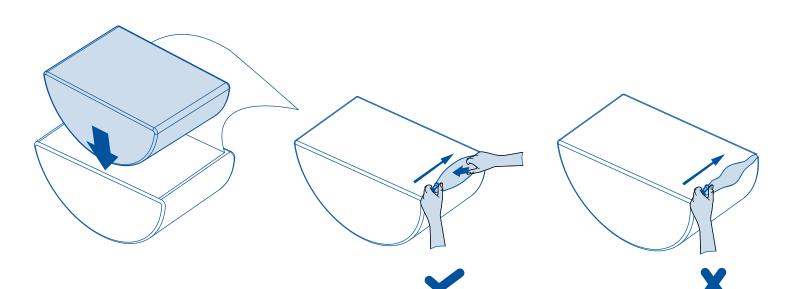

WARNING! Keep away from fire and heat sources to avoid permanent damage to the product. Adult Assembly required.

