

battat®


Childhood Is Magical!®
ROCK & BALANCE BOARD™





PARTS LIST

3+


1 wooden
balance board

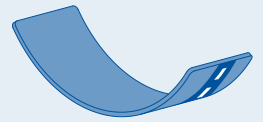


1 foam
semi-circle

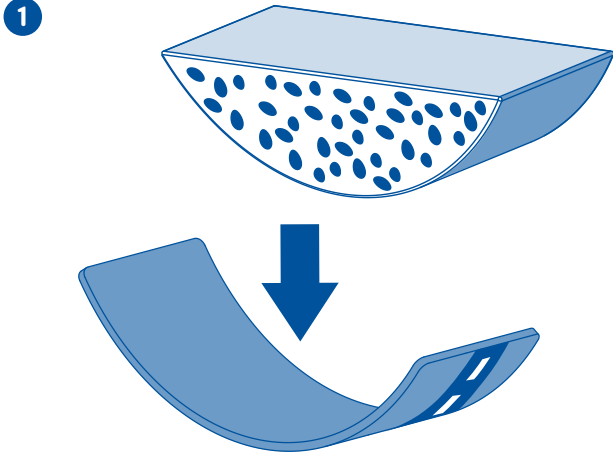 


2 If you notice a slight deformation, simply adjust by hand to correct the shape.

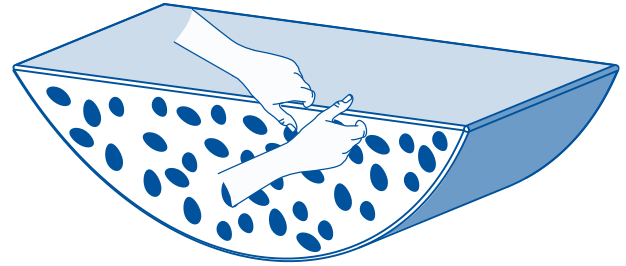

3 Close the zipper and make sure the zipper pull is hidden beneath the lining to prevent children from unzipping the foam piece.

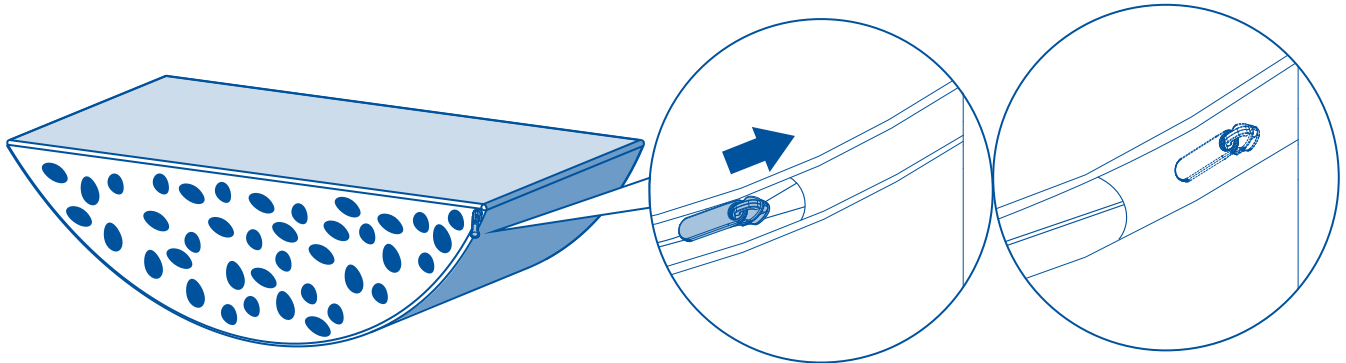

4 When putting on the cover, pull on the cover with one hand and push the foam piece with the other. This helps when replacing the cover.

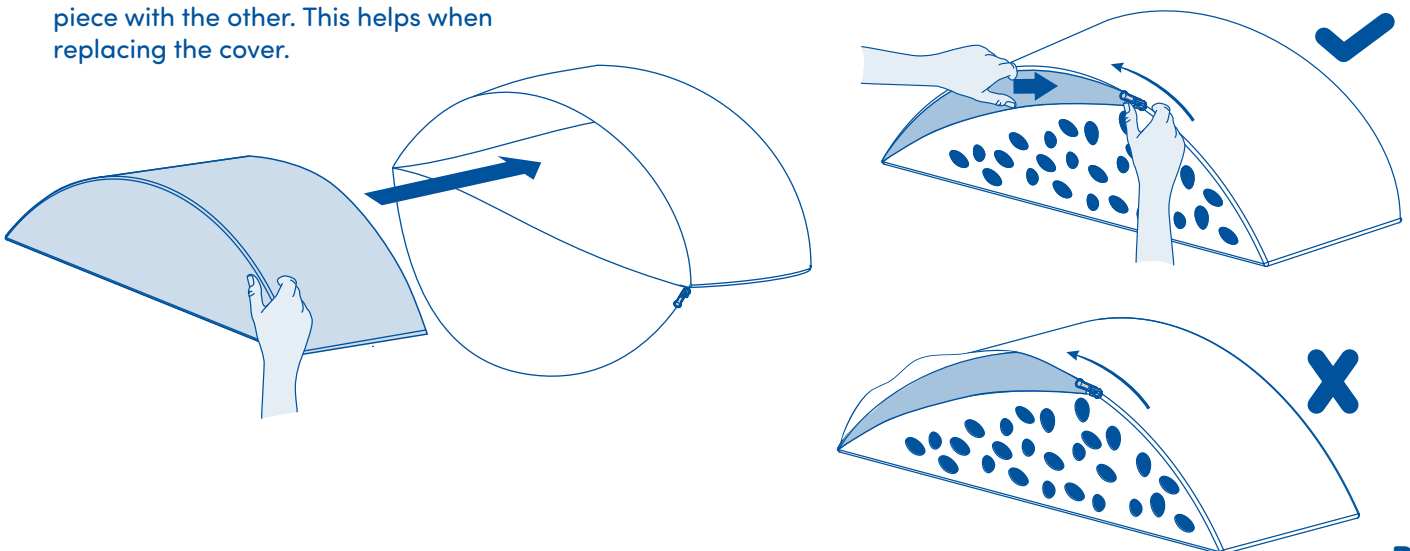


BT1855

- 5 DO NOT** put hands or feet under the balance board during playtime.




WASHING INSTRUCTIONS:

- Remove the cover
- Do NOT wash the foam piece
- Machine-wash at max. 30°C/86°F
- Do NOT bleach
- Tumble dry on low
- Do NOT iron with a dry iron
- Do NOT dry clean

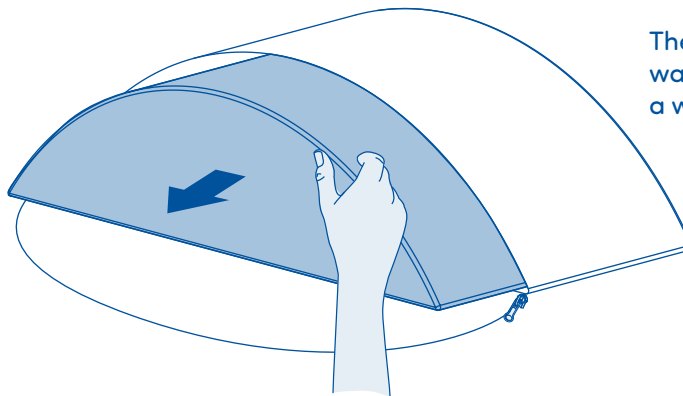

The cover is removable and washable. You can clean it in a washing machine.

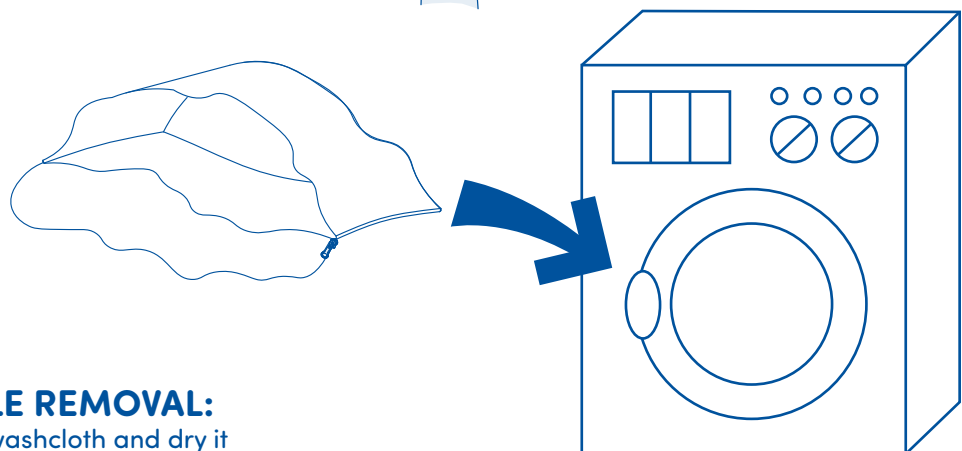

OPTIONS FOR WRINKLE REMOVAL:

- Wipe the cover with a damp washcloth and dry it with a blow dryer
- Iron the cover with a steam iron without direct contact (do NOT use a dry iron)
- For the best results, wash and dry the cover

WARNING! Keep away from fire and heat sources to avoid permanent damage to the product.
Adult Assembly required.

© 2024 MAISON BATTAT INC.
Manufactured for Maison Battat Inc.
8440 Darnley Road, Montreal, P.Q. H4T 1M4
Designed by Maison Battat Inc. Battat® is a registered trademark of Maison Battat Inc.
Made In China.
All Battat® products meet all US standards.
Colors may vary.
Please retain this information for future reference.
Please remove all packaging materials before giving to children.