



3 For the best results, leave the foam shapes to expand for at least 48 hours.

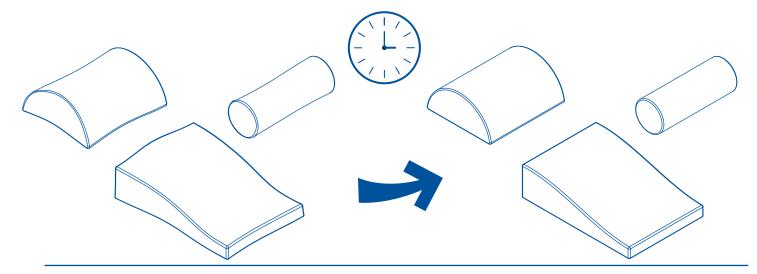


## 4 Reshaping:

If the foam pieces do not achieve the desired shape after more than 48 hours, use a blow dryer (at a normal termperature) to correct the shapes.

- Keep the blow dryer 2 inches (5cm) from the foam pieces
- Reshape the warmed foam pieces by hand

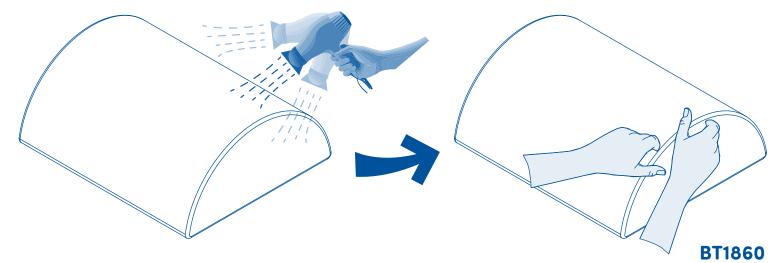

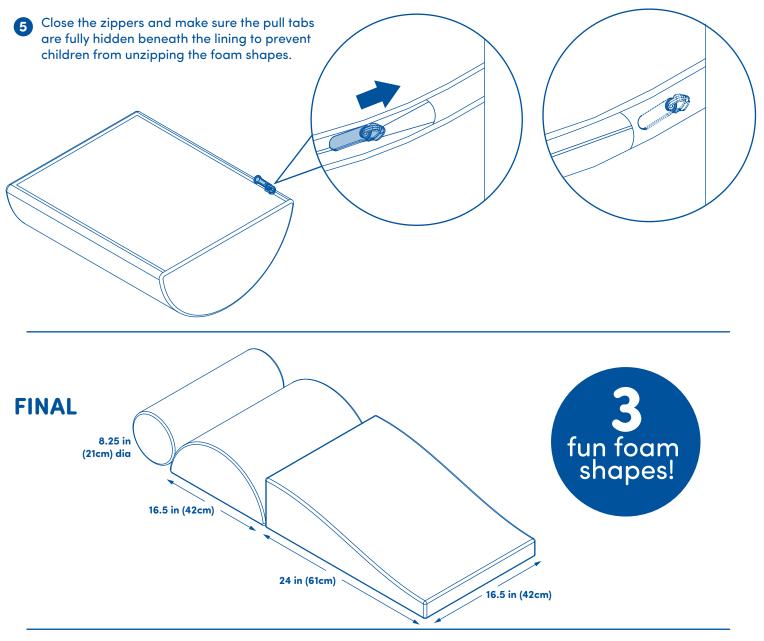


## WASHING INSTRUCTIONS:

Remove the covers Do NOT wash the foam shapes Machine-wash at max. 30°C/86°F Do NOT bleach Tumble dry on low Do NOT iron Do NOT dry clean


## **OPTIONS FOR WRINKLE REMOVAL:**

- Wipe the cover with a damp washcloth and dry it with a blow dryer
- Iron the cover with a steam iron without direct contact (do NOT use a dry iron)
- For the best results, wash and dry the cover

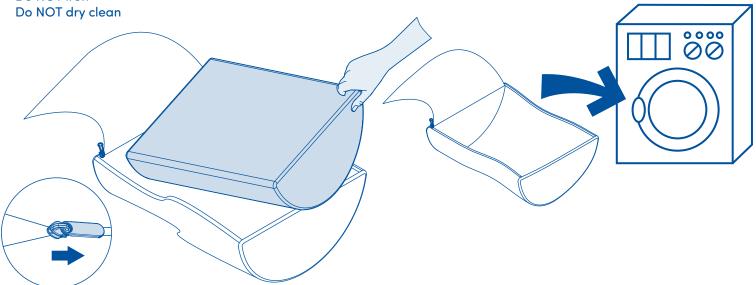

## How to replace the covers after washing them:

When putting on a cover, pull on it with one hand and push the foam piece with the other. This helps when replacing a cover.

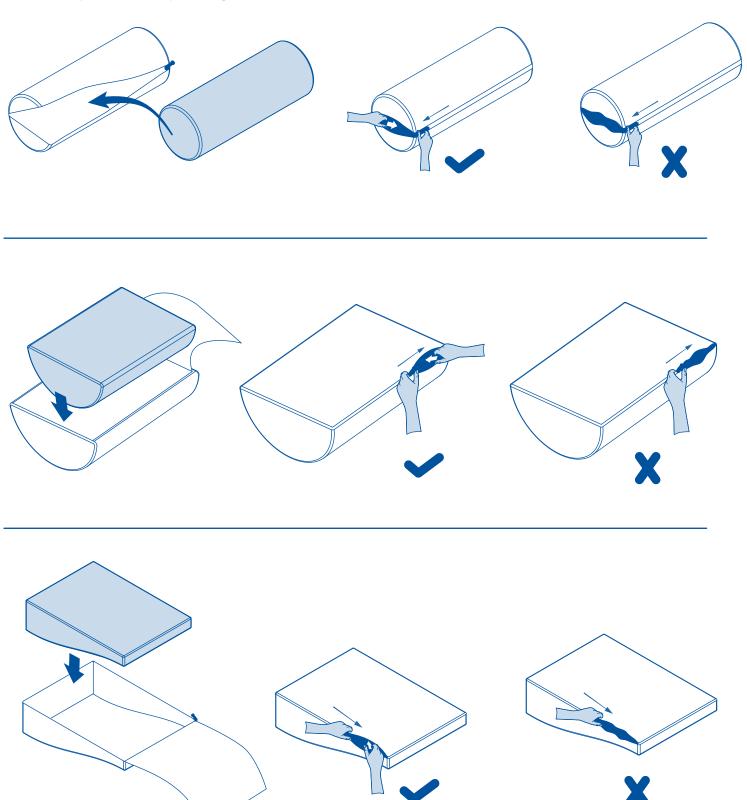

© 2024 MAISON BATTAT INC. Manufactured for Maison Battat Inc. 8440 Darnley Road, Montreal, P.Q. H4T IM4 Designed by Maison Battat Inc. Battat® is a registered trademark of Maison Battat Inc. Made In China. All Battat® products meet all US standards. Colors may vary. Please retain this information for future reference. Please remove all packaging materials before giving to children.

**WARNING!** Keep away from fire and heat sources to avoid permanent damage to the product. Adult Assembly required.

**BT1860**